

Installation Sheet



TLM Series

TLM Bracket (L & Z STYLE)



Installation Instructions

1. Select a suitable location on the guard to mount the bracket.
2. If possible, locate the bracket and mount using an existing panel bolt. If this is not possible, hold the bracket in place and mark the position of the mounting holds.
3. Drill 3 x 3mm/3.5mm holes and attached bracket with self-taping/drilling screws provided.
4. Install antenna on bracket by following the instructions supplied with the antenna.
5. Route cable through engine bay.
6. To complete the installation, some minor adjustment of the bracket may be required to vertically position the antenna.

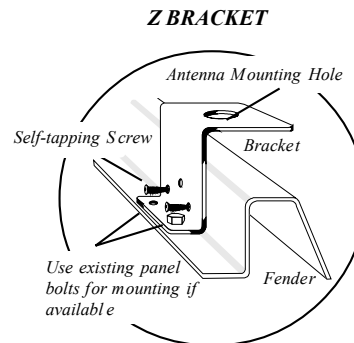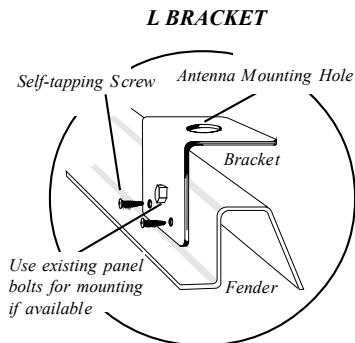

Installation Sheet

TLM Series

TLM Bracket for FORD RANGER




Installation Instructions

1. This Ford Range bracket has been designed to mount on the centre or rear (closest to wind screen) panel bolts, on either the left or right hand side.
2. Remove the appropriate panel bolt and re-attached over the bracket (see drawing below)

IMPORTANT: Due to the nature of the Ford Ranger bonnet, we highly recommend that some form of protection be applied to the guard to stop scratching of the paintwork.

3. If additional fixing strength is required, drill 2 x 3mm/3.5mm holes and install the self-taping/drilling screws provided.
4. Install antenna on bracket by following the instructions supplied with the antenna.
5. Route cable through engine bay.
6. To complete the installation, some minor adjustment of the bracket may be required to vertically position the antenna.

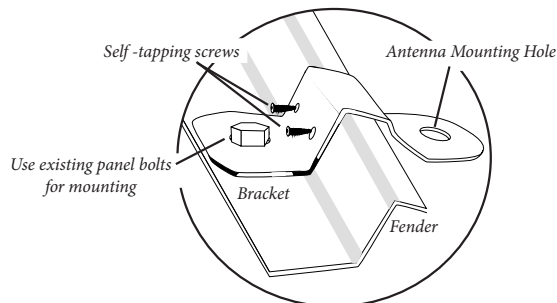

Copyright RF Industries Pty Ltd 2013. Subject to change without notice.